
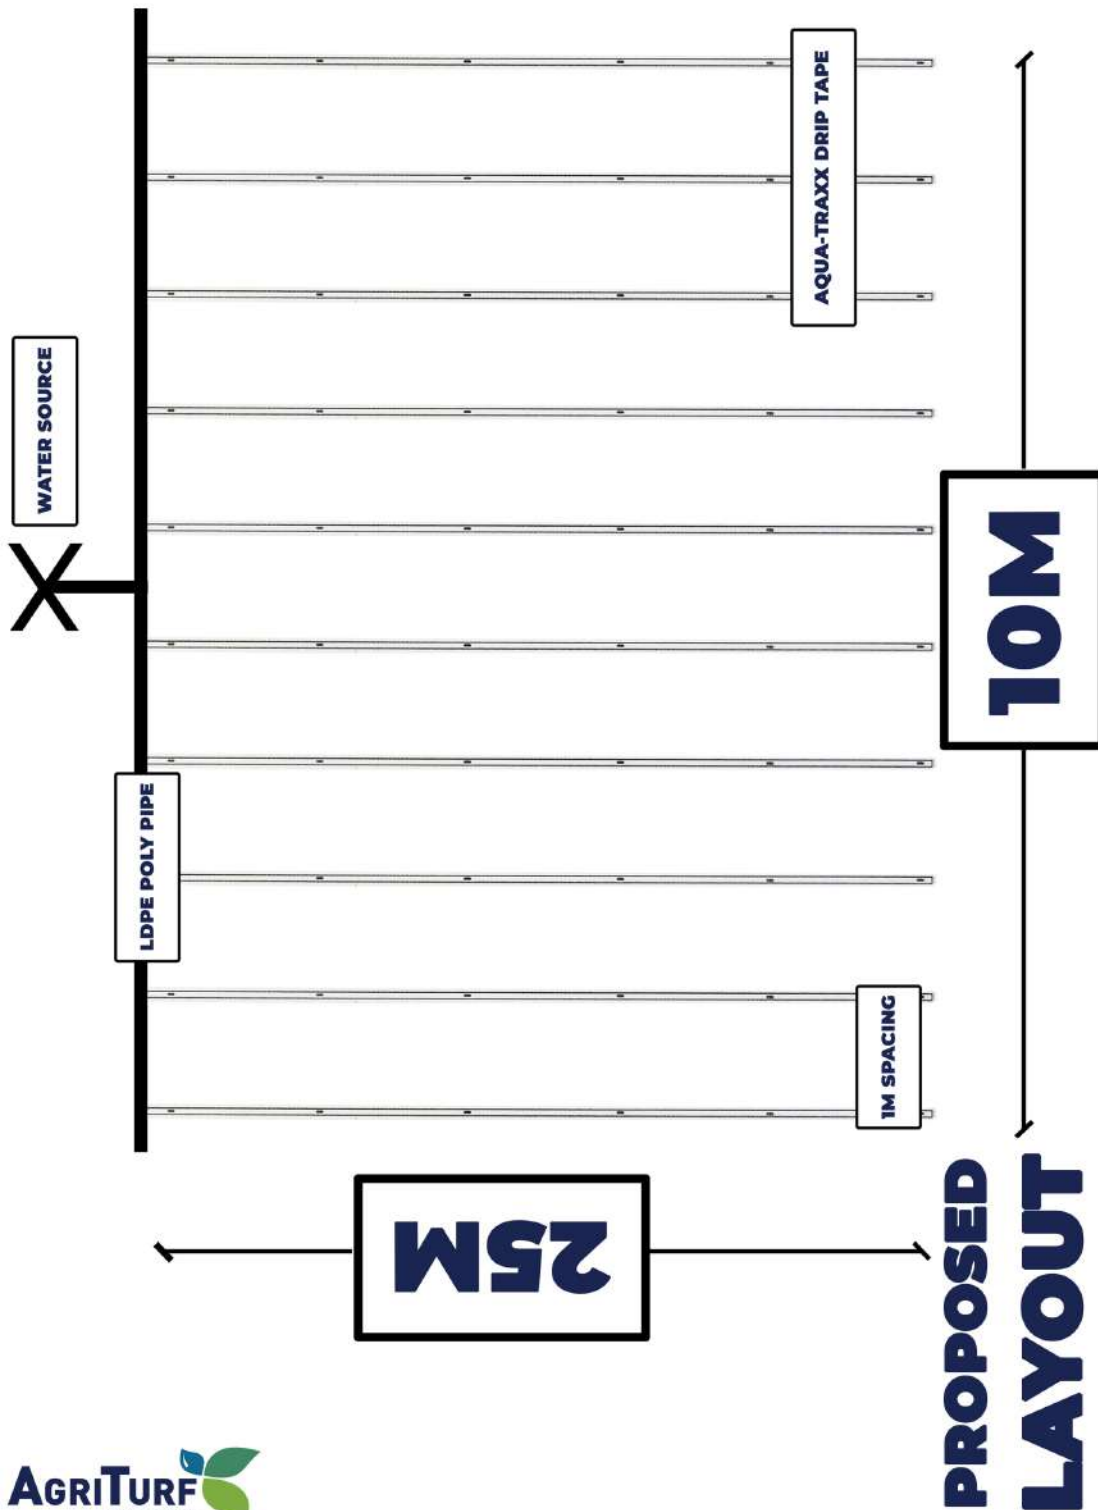


GUIDELINES 250m²


- STEP 1 Obtain or draw a scaled plan of the area to be irrigated.
- STEP 2 Locate the point of connection on the plan.
- STEP 3 Note the site and environmental parameters:
 - soil textures (clay, sandy, loamy)
 - plant material
 - direction and degree of slope
- STEP 4 Lay out the laterals according to the following: 10 lateral driplines with 1m spacing between each.
- STEP 5 For applications exceeding a 3% slope, place the laterals parallel to the slope contour.

REQUIREMENTS

WATER SOURCE
CAN BE:

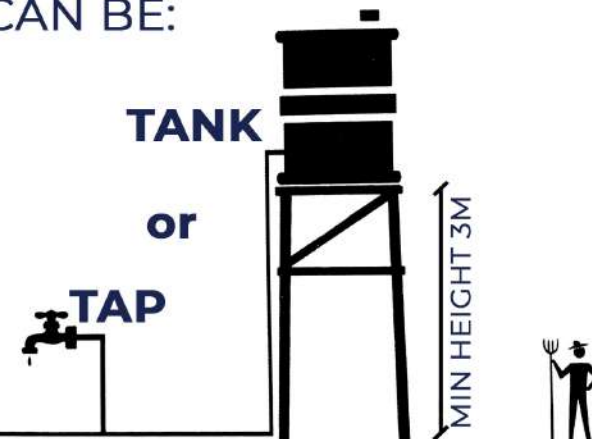

INSTALLATION INSTRUCTIONS

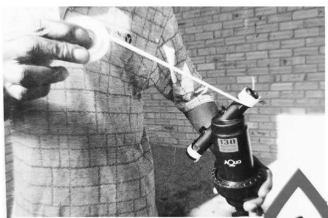

1



2



3



4



5



6




7



8




9

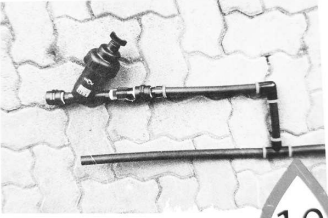

10



11

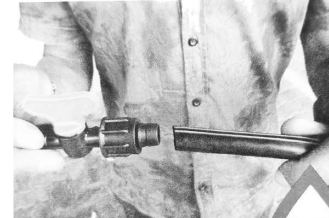

12



13




14



15




16

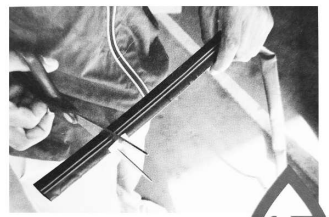

17



18

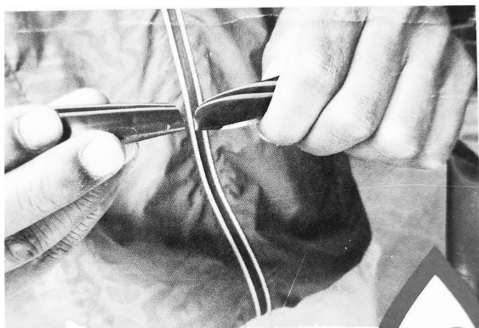

19



20

STF
FILTROS

TORO

AGRITURF
helping you grow